


heatmiser®



Model: **UH3**



Wiring Diagram - UH3

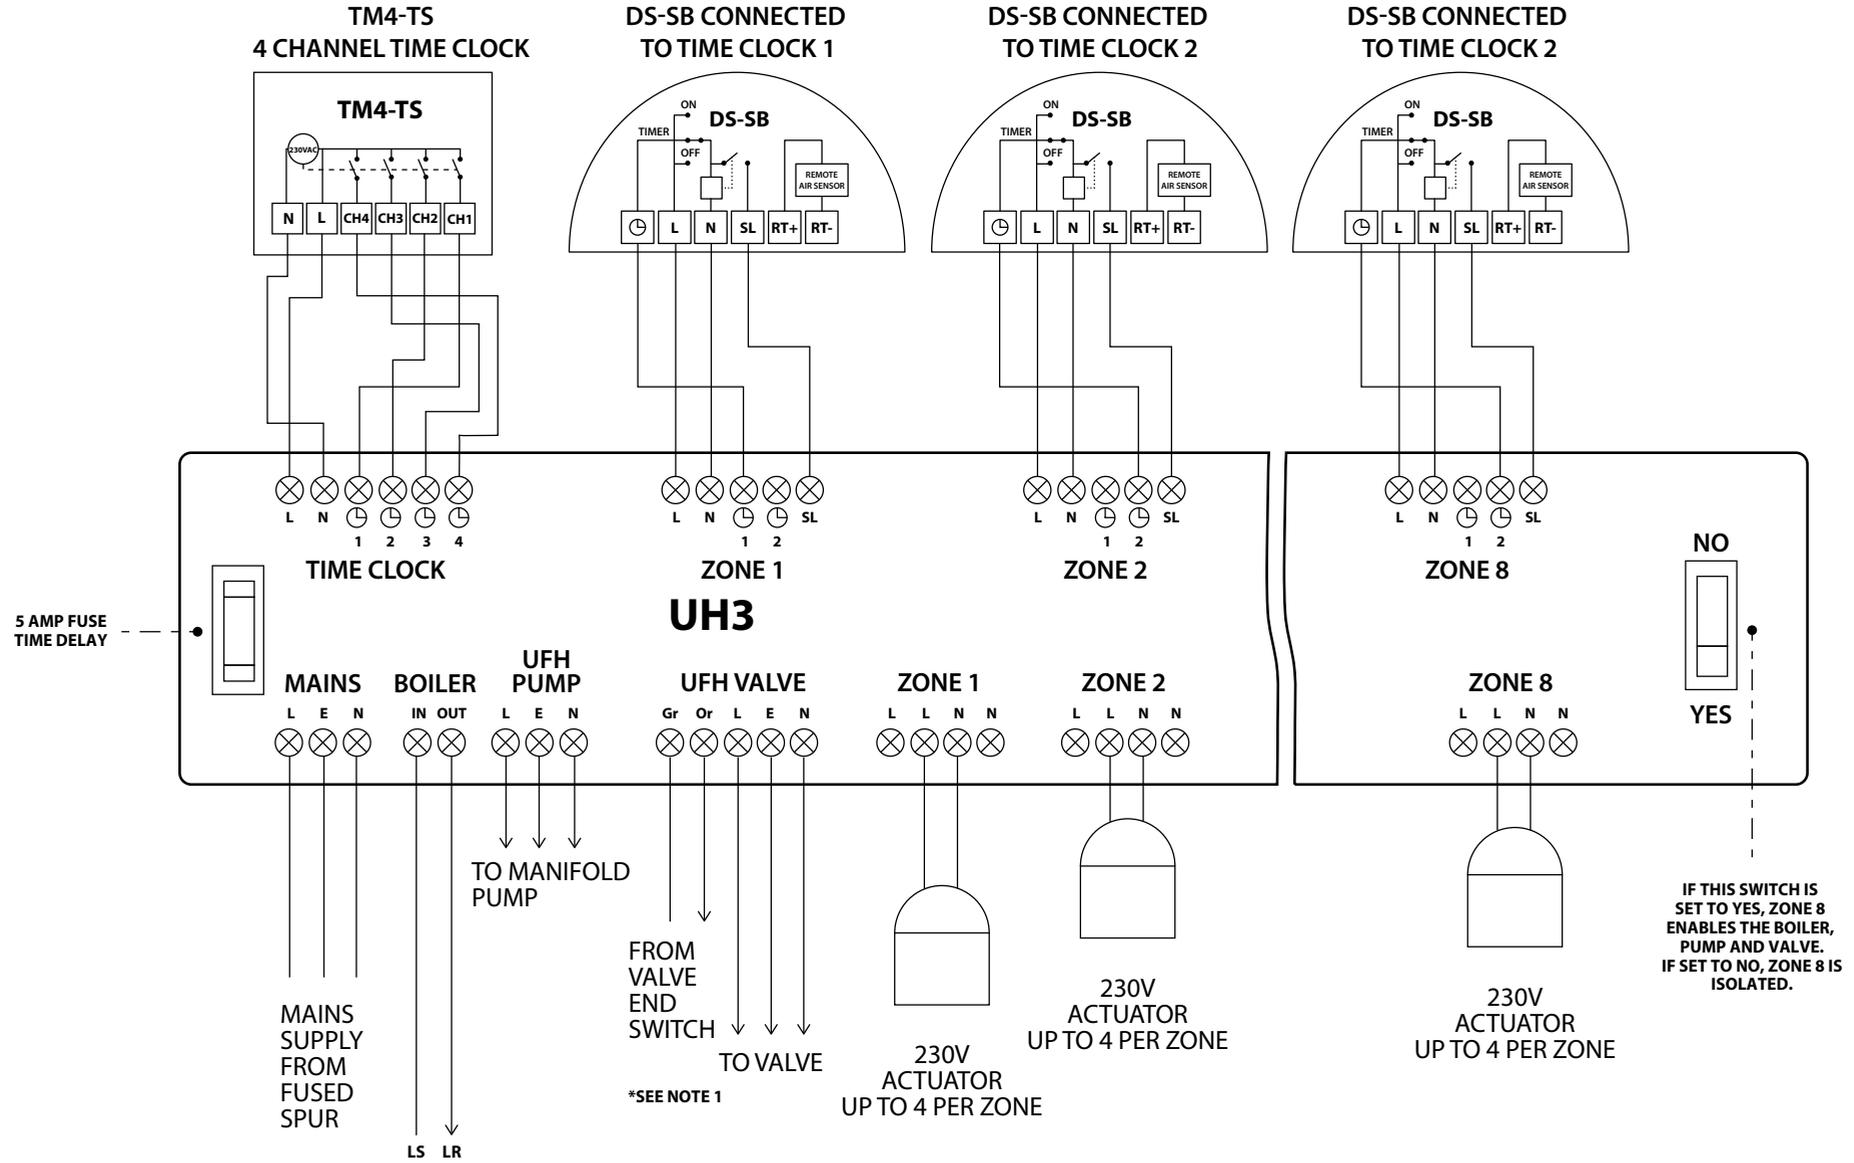

N.B. For boilers requiring a switched live signal connect LS to permanent live and LR to the boiler.

NOTE 1
Gr - Grey Wire, Or - Orange Wire
Some valves use different colours. If the endswitch is not being used put a link between Gr and Or

This equipment should be installed by an appropriately qualified / registered electrician.
Ensure all wiring is correct before applying power.
The warranty does not cover any damages caused by incorrect wiring and installation.



Heating Professionals:

Request a copy of our product installation guide containing detailed technical specifications for our complete product range:
www.heatmiser.com/guide

Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website:
www.heatmiser.com



PDF



FAQ



Facebook:
facebook.com/thermostats



Twitter: [heatmiseruk](https://twitter.com/heatmiseruk)

Products Commonly Used With UH3 Wiring Centre:



TM4-TS



DS-SB

Other Heatmiser Wiring Centres:



UH1



UH1-W



UH2